



## Druckeinstellungen:

1. Die Datei zunächst auf die Festplatte speichern.
2. Die gespeicherte Datei anschließend im Acrobat-Reader öffnen.  
(nicht als Vorschau oder im Browser)
3. Über „Datei“ auf „Drucken“ gehen und folgende Einstellungen vornehmen:

Seite anpassen und Optionen:    Tatsächliche Größe  
Ausrichtung:                            Auto

4. Mit dieser Einstellung die Seite mit dem Kontrollquadrat drucken.
5. Das Kontrollquadrat muss die Maße 10 x 10 cm haben.
6. Der äußere Rahmen muss im Abstand von 2cm zur Blattkante sein.
7. Wenn alles stimmt, den Schnitt komplett ausdrucken.



## Print settings:

1. First save the file onto your computer.
2. Then open the saved file in Acrobat Reader (not as a preview or in the browser).  
Download for free at: [www.get.adobe.com/reader](http://www.get.adobe.com/reader)
3. Go to "File" and select "Print". Choose the following settings:

Size options:    Actual Size  
Orientation:    Auto

4. Then print only the page with the test square.
5. The test square must measure 10 x 10 cm (4 x 4").
6. The outer frame must be at a distance of 2 cm (0,79") from the edge of the sheet.
7. If everything is correct, print out the complete pattern.

2a

1a

03  
21

MITTE STOFFBRUCH  
center fabric fold  
середина сгиб ткани

FADENLAUF  
straight grain / направление нити

1a

2b

1b

04

REISSVERSCHLUSS  
zipper / застежка-молния

MITTE STOFFBRUCH  
center fabric fold  
середина сгиб ткани

2c

1b

05  
**24**

1c

FADENLAUF  
straight grain / направление нити

2d

UMBRUCH  
fold / сгиб

UMBRUCH  
fold / сгиб


06

1c

MITTE STOFFBRUCH  
center fabric fold  
середина сгиб ткани

FADENLAUF  
straight grain  
направление нити

3a

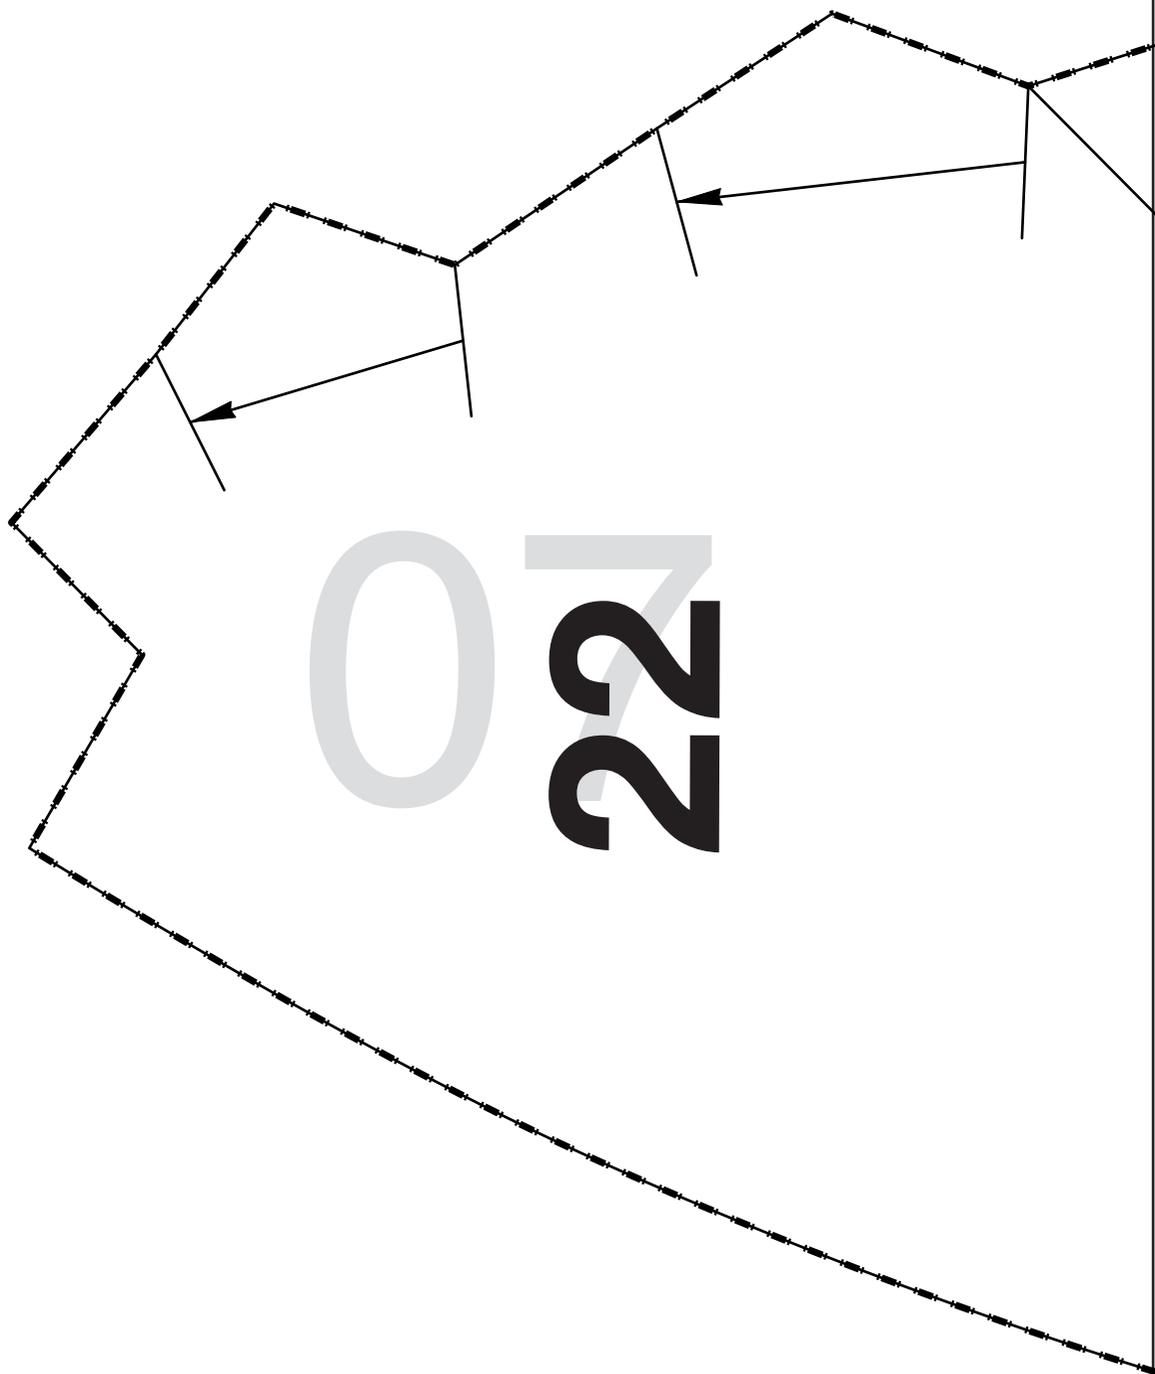


2a




3a

3b

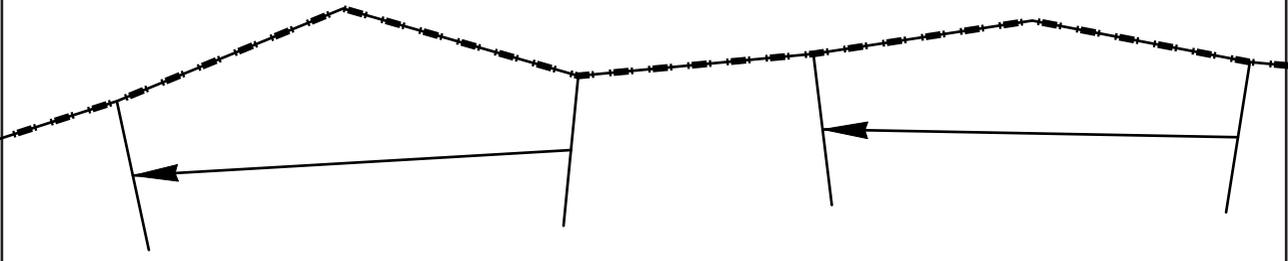

straight grain / *параллельная нити*  
FADENLAUF

80

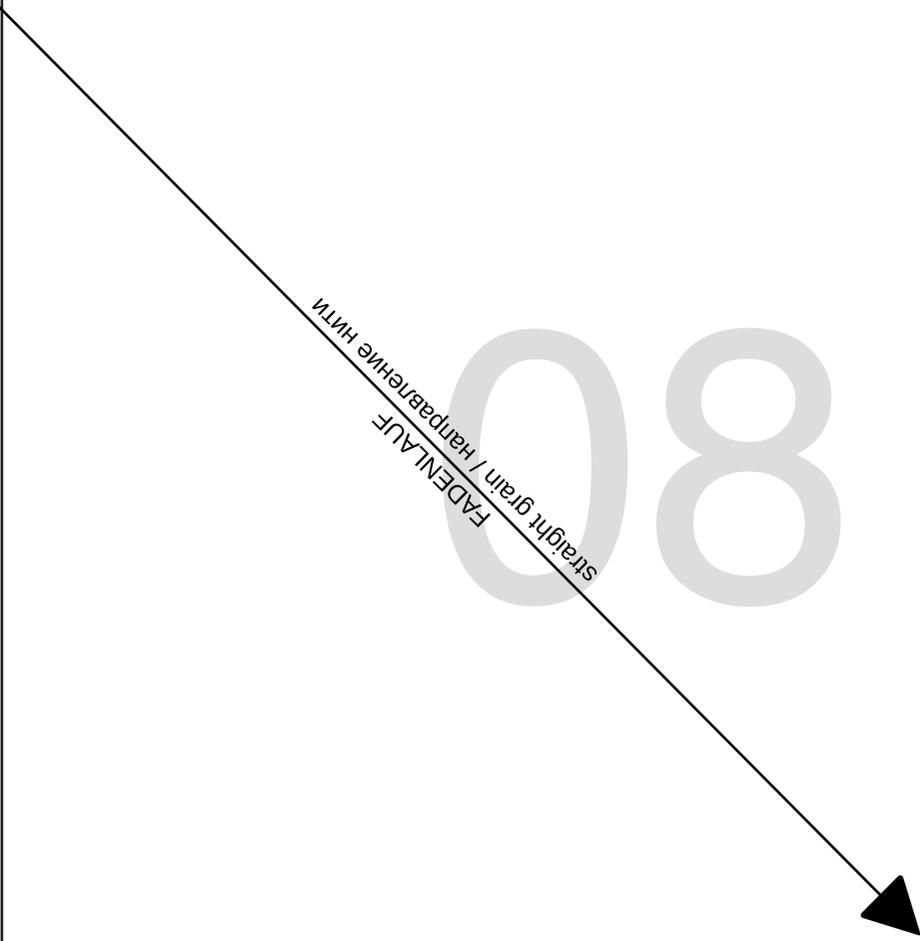


2b



3b

3c

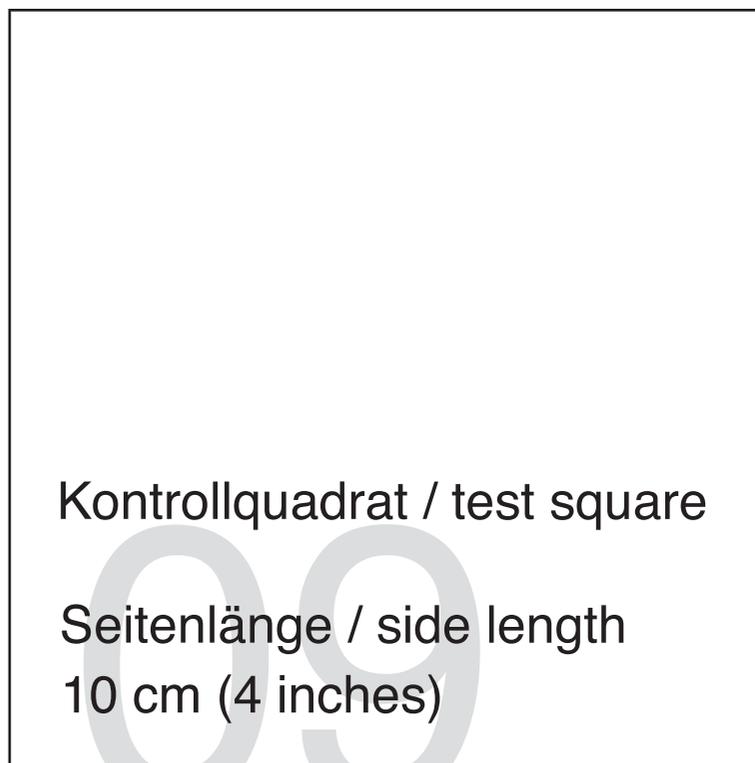

MITTE STOFFBRUCH  
center fabric fold  
середи́на сги́б ткани

**burda**<sup>®</sup>  
[www.burdastyle.de](http://www.burdastyle.de)

2c

3c

10

23

2d